


8X4 - FM1077 - FLOOR CUTTING & DRILLING PLAN

SHEET SIZE: 2440 x 1220mm - Thickness 12 - 17mm **CUT SIZE:** 1218 L x 1160 W mm - **Quantity:** 2 Pieces

DRILL HOLE SIZE: 10mm (Optional 19mm Countersink for Bolt Heads)

Note: Mark Out / Drill Cut Sheets **OR** Simply Position Cut Floor on Trailer, Mark Holes from Underneath, Turn Over & Drill Marked Postions.

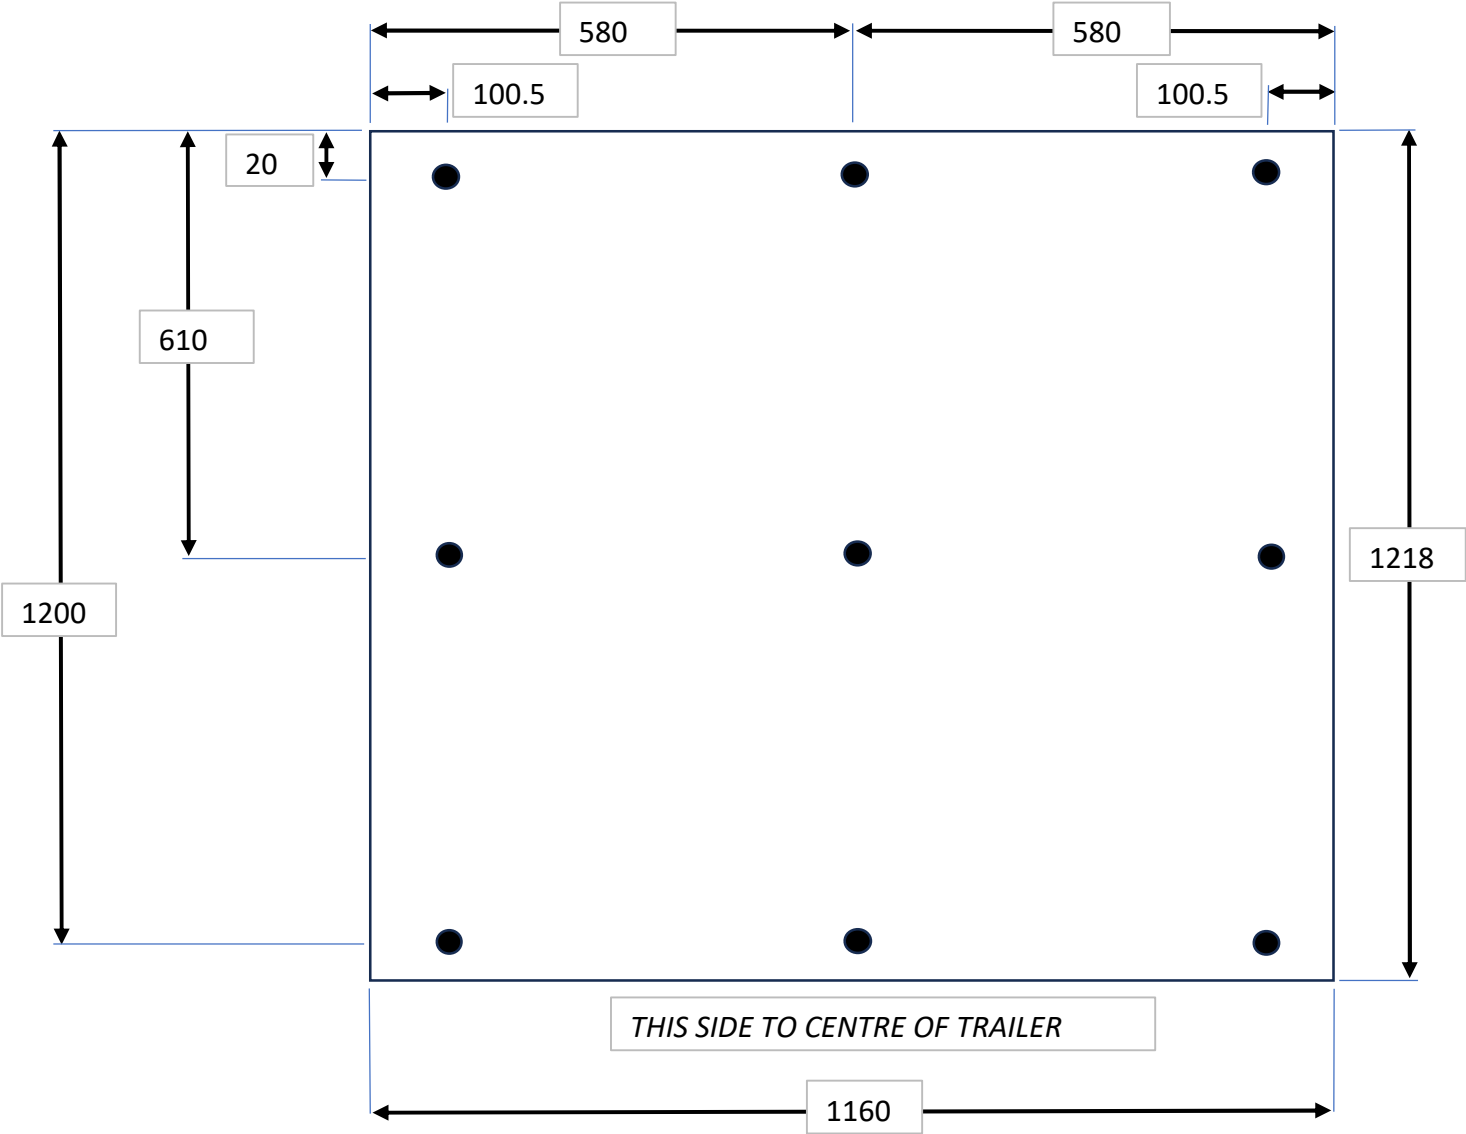

8X4 - FM1077 - FLOOR FITTING INSTRUCTIONS

FLOOR BOLTS: 18 Pieces M10 x 40mm Countersink Bolts or Coach Bolts (M10 Nuts & M10 Spring Washers)

Note: Easy Trailer 84FF is Supplied with Floor Bolting Kit - **Item # FBK-18** is Packed inside one of your Accessory Boxes

1. Fit Prepared Floor Panels to Trailer Chassis as Shown Below (Floor Panels Fit Between Corner & Centre Chassis Bolt Heads)
2. Using M10x40mm Bolts, Insert 3 Bolts Per Crossmember as Shown with Arrow
3. If Crossbeam Holes are not lining up with Floor Holes, Loosen Crossmember(s) Bolts to Shift & Align with Floor Holes, Re-tighten Bolts.
4. Apply M10 Spring Washers & M10 Nuts from Underneath to Secure Floor to Trailer Chassis

